


Please take note of the corrections to Page 5 in the Product manual below:

For Electric HHeat only the EH switch should be on and the rest of the switches off. For Gas furnace all DIP switches should be off except of course need to turn on the DIP switches that determine the house code.

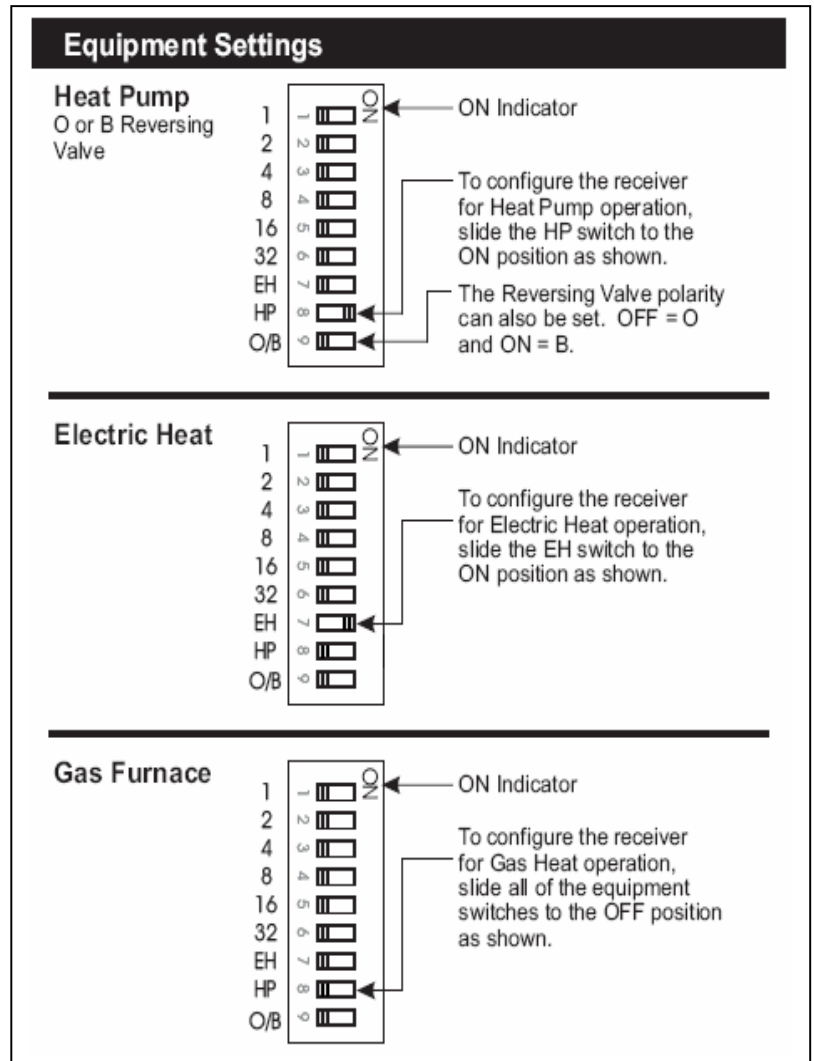

For installation assistance or to learn more about wireless home automation systems please contact your RfWeL representative at www.rfwel.com